



FOR MOST STARTERS, THE LIGHT GAGE (16 OR 18) WIRE CAN BE OMITTED. THE STARTER WILL HAVE A JUMPER BETWEEN THE SMALL CENTER TERMINAL AND THE LARGE TERMINAL WITH THE INCOMING VOLTAGE.

FOR STARTERS EXPERIENCING HESITATION IN DISENGAGING FROM THE RING GEARS, THE JUMPER ON THE STARTER CAN BE REMOVED AND THE WIRE ADDED FROM THE SOLENOID TO THE STARTER.